



Installation Guide

Duct By-Pass

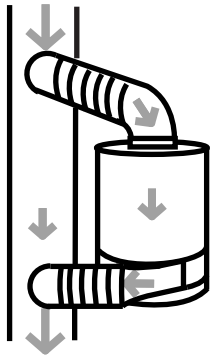


Vertical duct bypass

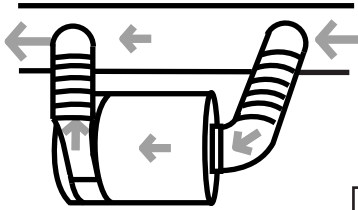


Horizontal duct bypass

6 feet
between
connections
recommended

Wall mount brackets available

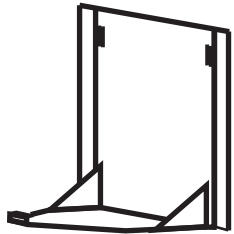

Vertical

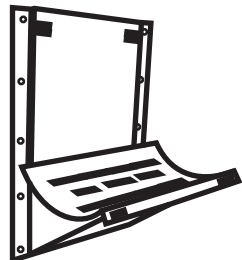


Horizontal

Standard
5" flanges
for easy
connection


No hardware
connection
plug-in only




Other Installations

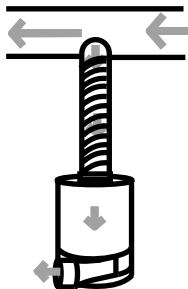

Extraction from duct

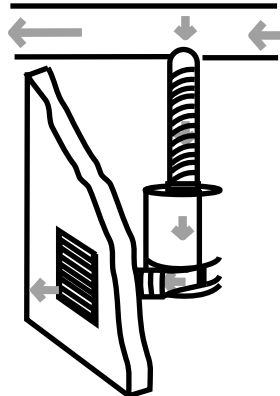

Duct to wall vent

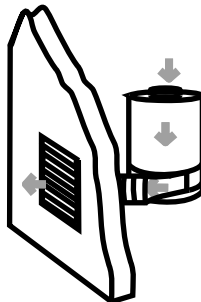

Free air to wall vent

Operating & Filter Replacement Directions

C600-W

Thank You for choosing an
Airpura High Efficiency Air Purifier
To bring you the benefits of clean indoor air

To Begin Using Your Airpura...


- Inspect the exterior of your Airpura to verify there is no damage from shipping. If any damage is noted please follow the instructions in the Airpura returns policy.
- Assemble the unit by attaching the top cover and the outlet elbow following the assembly instructions on page 2 of this guide
- Install the unit following the installation instructions on the back cover of this guide
- Plug the unit into a regular grounded 110 volt outlet
- Turn on the unit to MAX and allow it to run for a few minutes
- Set the variable speed control to the level you wish
- The most efficient way to use your Airpura for regular air quality maintenance is to run it at a low speed 24 hours a day 7 days a week

Feel the difference breathing clean air makes
to your health

Assembly Instructions

Attach standard 5" pipes

Attach standard 5" pipes from the house ventilation system to create a bypass to the air purification system

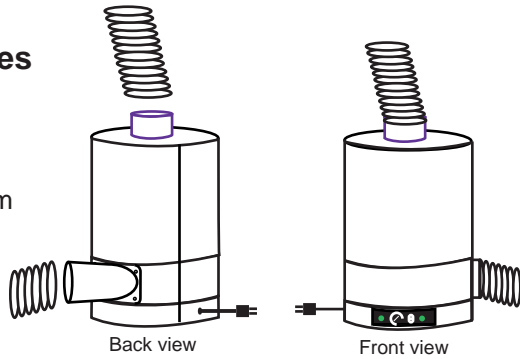

Always unplug the unit before changing filters

The Activated Carbon and HepaBarrier Filters

Should be changed as needed in heavy applications and at least every 24 months in normal use.

The Pre-filter

Should be replaced at least every 3 months of normal use

Filter Replacement

